


PORTABLE PROJECTOR SCREEN

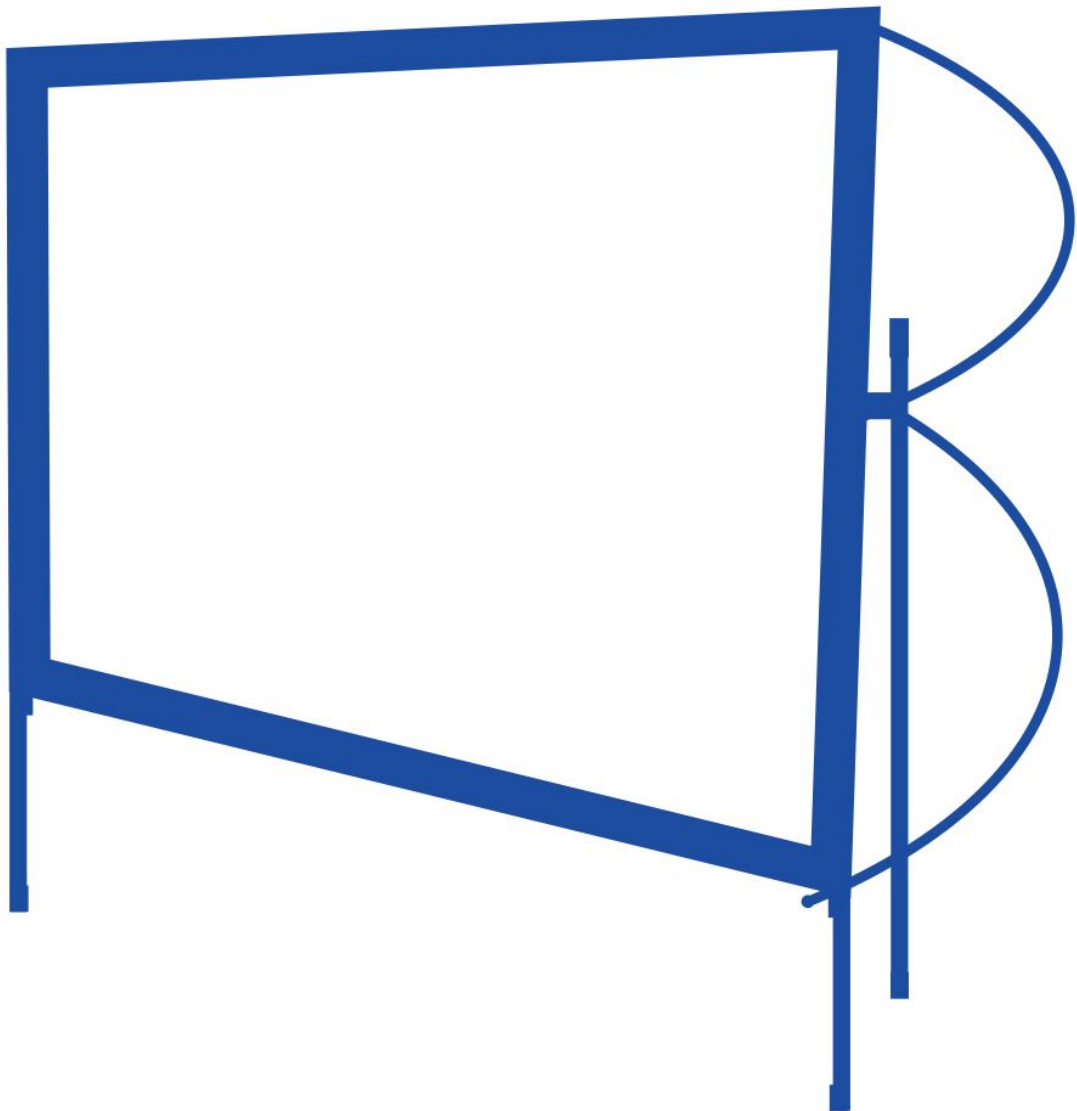

User Manual

NIERBO

Dear customer,

Thank you for purchasing NIERBO portable projector screen.

After receiving the product, please check all the parts to make sure they are in good condition.

If there is any problem with the product or you have any questions, please contact NIERBO customer service for help. Email: service@nierbo.com.

Product Specifications

- Screen material: Polyester
(※screen is with flexibility, size tolerance is +/- 1cm)
- Screen viewing size: 177*99 cm/70*39 inches
- Diagonal size: 195 cm/77 inches
- Black border width: 4 cm/1.6 inches
- Screen format: 16:9
- Screen viewing angle: 0-160°
- Screen gain: 1.3
- Screen weight: 0.42 kg/0.92 lb
- Stand material: Glass fiber
- Stand max bearing: 2.0 kg/4.4 lb
- Stand extension dimensions: 183*149*95 cm/72*59*37 inches
(※ Distance between back stand and screen: 95cm/37 inches)
- Stand weight: 1.84 kg/4.05 lb
- Product total weight: 2.33 kg/5.14 lb
- Package size: 48*15*9 cm/18.9*5.9*3.5 inches

Package Include

- Projection Screen*1
- Screen Stand *2

- Wind Nails*3
- User Manual *1
- Portable Bags*2
- Warranty Card *1

Product Features

- Polyester Material: No crease, easy to wash.
- Foldable Pole Design: Quick installation and uninstallation, saving space, and portable.
- 0-160°Viewing Angle: Uniform and soft luster, long time watching is not easy to fatigue, and can also protect eyesight.
- 16:9 Format: Golden ratio design, support HD 3D projection.




Product Function


- Usage: For projection of long-focus projector, short-focus projector, laser projector, 4K projector, 3D projector, LED projector, LCD projector, DLP projector, and etc.
 - Usage Scenario: For home theater, conference room, training, club, party, garden, camping, travel, and etc.
- ※ Dark environments work better

Application Method

1. Open the package, taking out the screen, the stand, and other accessories.

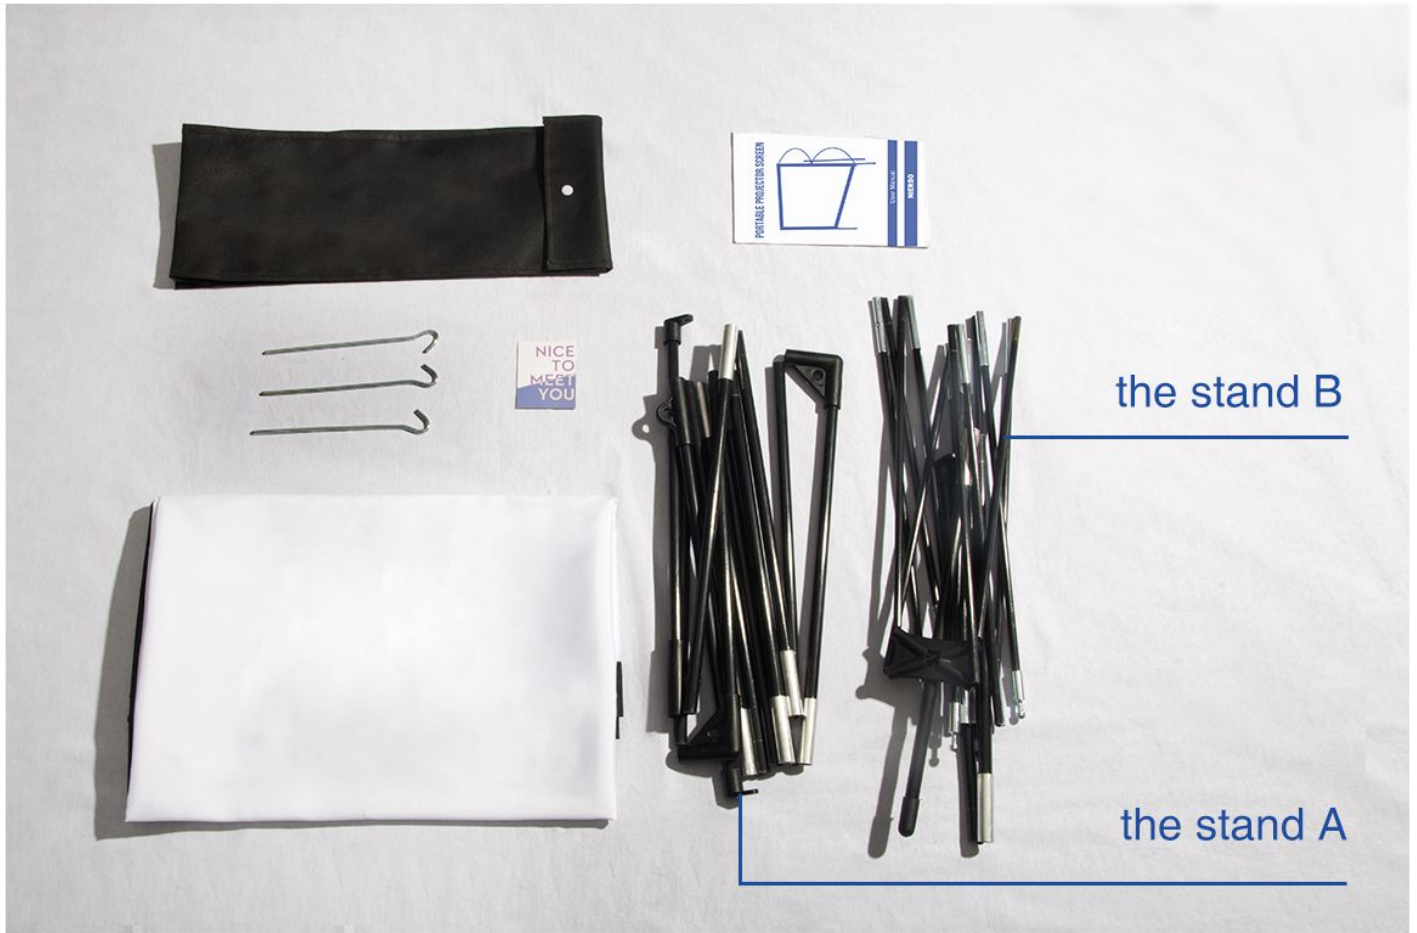


2. Unfold the stand A, as below picture:

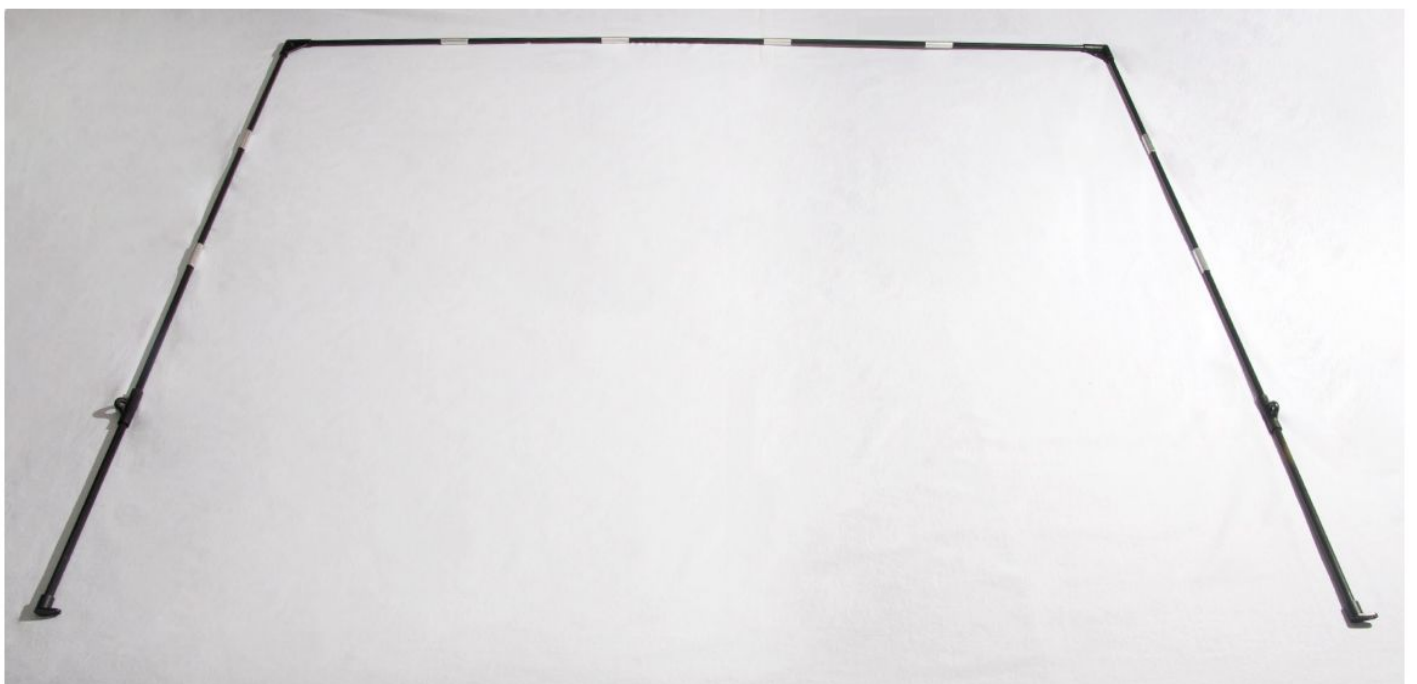


3. Install the screen on stand A, as below picture:


※the screen HOOK & LOOP must be glued together before installation, otherwise it will cause the screen pilling and damage the screen.

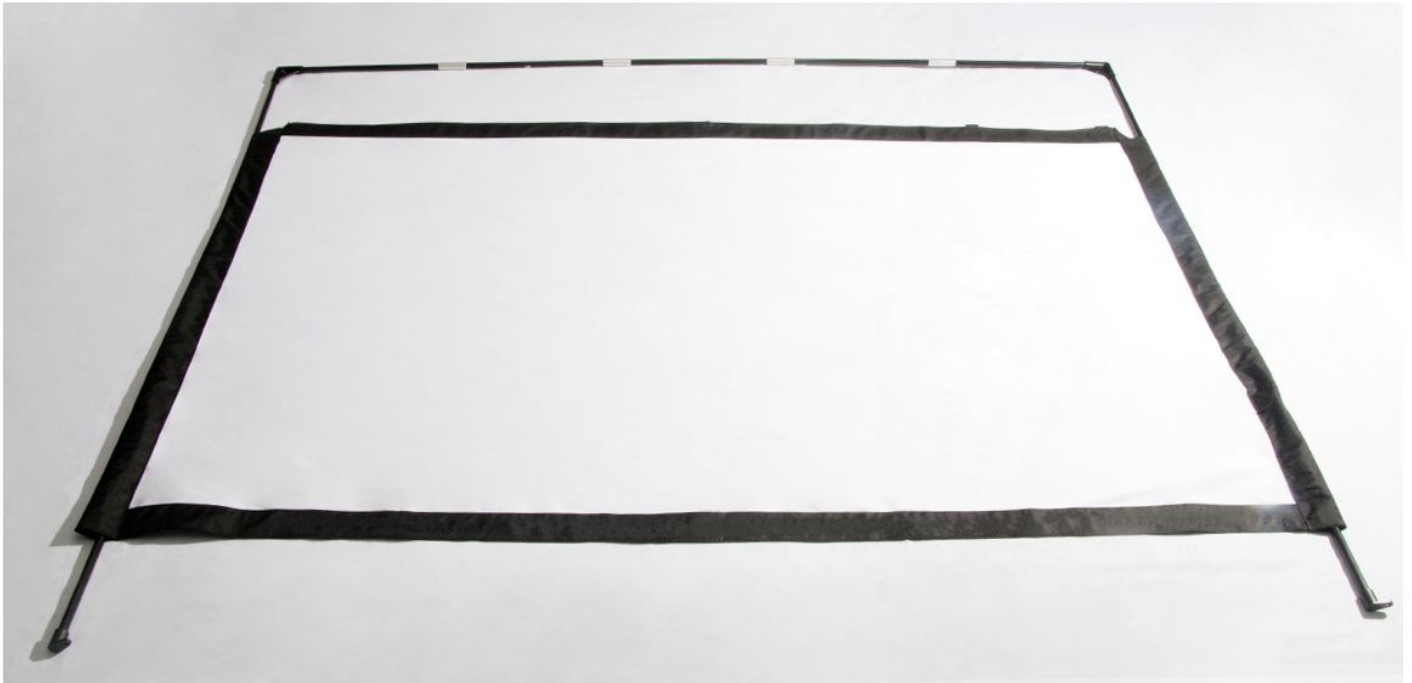

4. Unfold the stand B, as below picture:

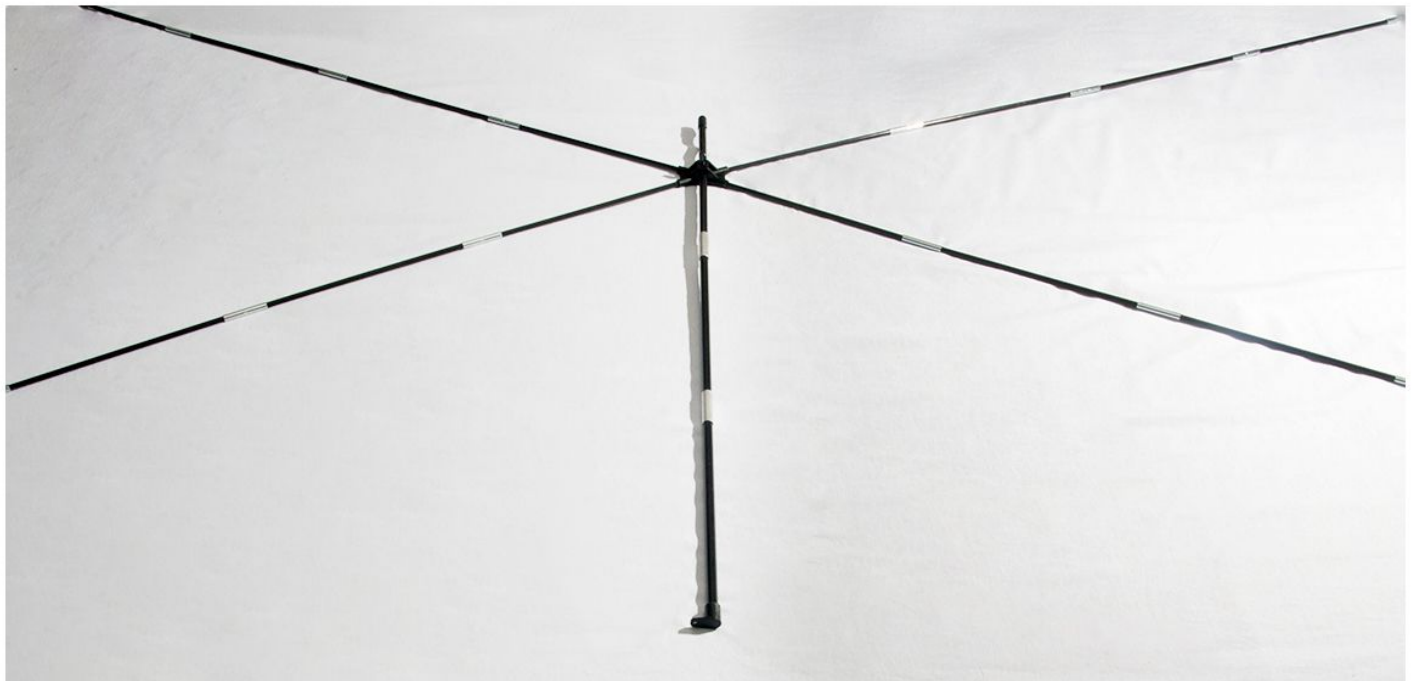


5. Install stand B into stand A, as below picture:

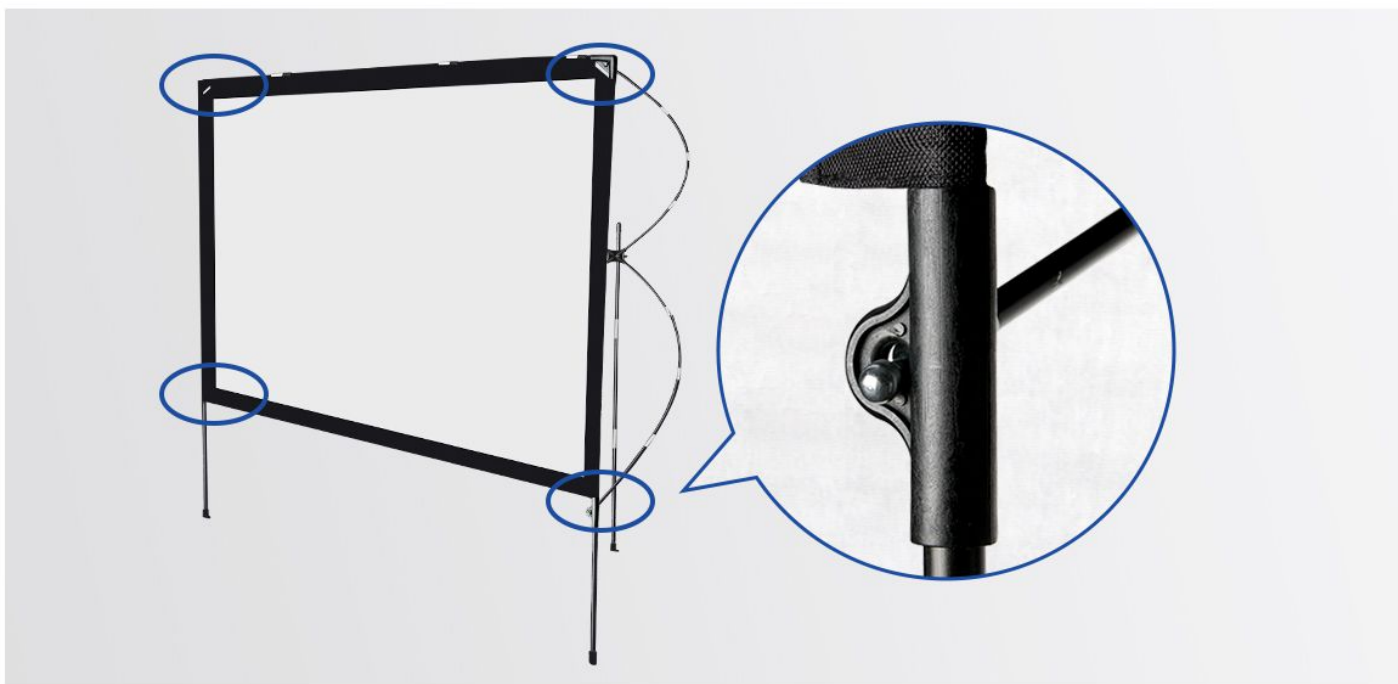

6. Adjust the position of the back stand lock, position it for best standing and viewing, as below picture:



7. Put the wind nails into the nail holes if needed, as below picture:

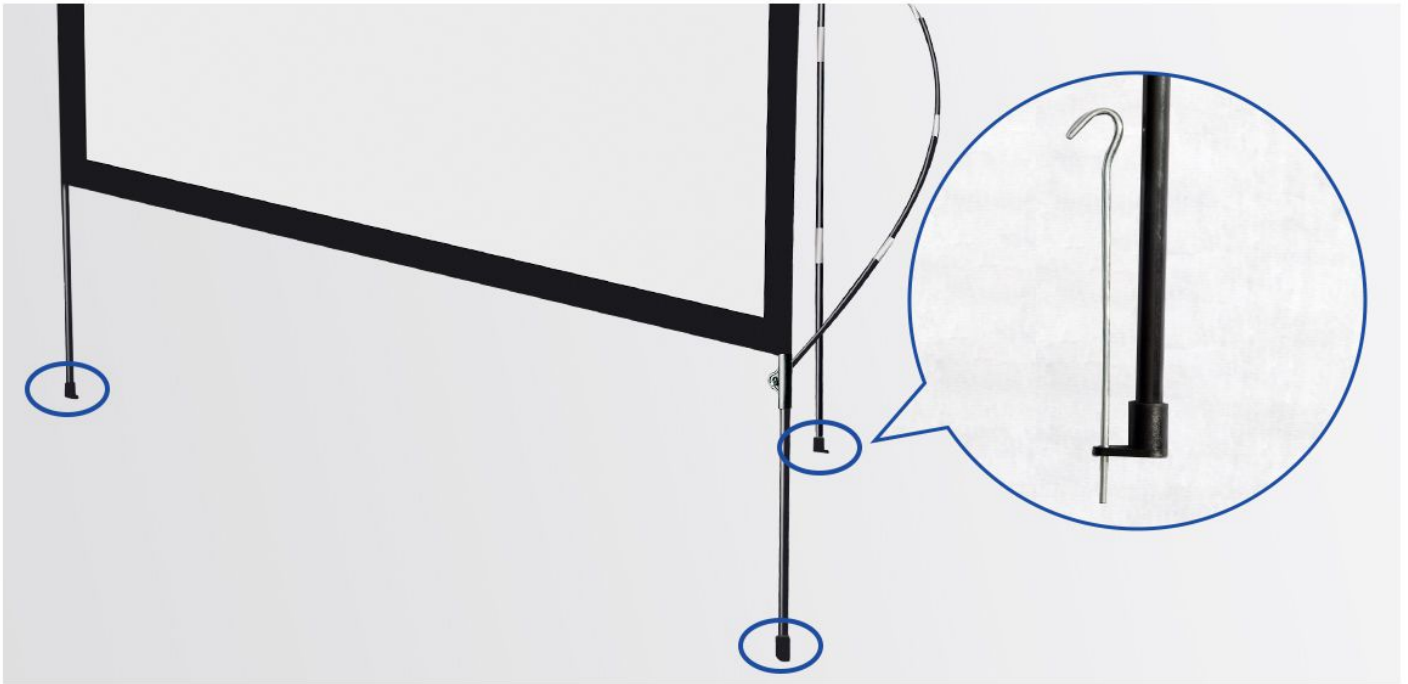

Frequently Ask Question

1. Will the screen change color after a long time use?

A: The screen should be stored correctly, if not under the blazing sun, not get wet in the rain, it will basically stay the same.

2. What if the screen get dirty?

A: It can be washed by hand and dried by a dryer.
Do not use corrosive detergents.

3. Can the screen be used in the wind?

A: It can be used in the gentle breeze with wind nails, can not be used in the strong wind.

Notice for Use

Please note the following when using the screen in case it's damaged.

- Do not touch the white part of the screen with your hands.
- Do not use pencil, marker or any other tool to write on the white part of the screen.
- Do not use the corrosive cleaner to clean the screen.
- Do not use or store the screen in dusty places.
- Do not use or store the screen in a hot or humid place.
- Do not use the screen in moderate breeze or above.
- Please store the screen the temperature range from - 10 to 50 °C.
- After the screen is used, be sure to put it in a storage box to keep it in good condition. When you store the screen, make sure the white part of the screen is free of insects or other objects.

Notice for Storage

Please note the following when storing the screen and stand in case any damage or injury.

- The screen HOOK & LOOP must be glued together before folding, otherwise it will cause the screen pilling and damage the screen.
- Remove stand B from the four fixation holes of stand A.
- Remove all connecting poles of stand B from the connecting tubes and fold them for storage.
- ※ Please release the pole gently after removing it, so as not to hurt the person when the pole springs up.
- Remove the screen from stand A.
- Fold the screen to keep it flat and place it in a storage box.
- Remove all connecting poles of stand A from the connecting tubes and fold them for storage.
- ※ Please store the screen and stand properly. If stored improperly, the screen and stand may be dirty or damaged.

Warnings and Precautions

- Please read this document carefully to use the product safely and correctly.
- Keep this document with the screen for a rainy day.
- Minors are not allowed to install or remove the stand and screen by themselves.

How to Contact Us?

Email: service@nierbo.com

FaceBook: <https://www.facebook.com/NIERBOTECH>

Official Website: <https://www.nierbo.com>



NIERBO
YOU CARE, WE CARE